



























## Systems supported by ECReader (update from V5,1x to V5,21)

### TRUCKS




### Mercedes Trucks

MODEL	SYSTEM TYPE	ENGINE / SYSTEM	ECU
 Atego	AUTOM. TRANSMISSI	1018 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1022 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1024 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1218 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1222 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1224 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1229 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1324 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1329 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1524 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	1529 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	716 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	816 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	818 Bluetec5 (06-08)	MB AGS 2
 Atego	AUTOM. TRANSMISSI	822 Bluetec5 (06-08)	MB AGS 2
 Axor	ENGINE MANAGEME	1829 bluetec5 (06-08)	MB
 Axor	ENGINE MANAGEME	1833 bluetec5 (06-08)	MB
 Axor	ENGINE MANAGEME	1840 bluetec5 (06-08)	MB
 Axor	ENGINE MANAGEME	1843 bluetec5 (06-08)	MB
 Axor	ENGINE MANAGEME	2529 bluetec5 (06-08)	MB
 Axor	ENGINE MANAGEME	2533 bluetec5 (06-08)	MB
 Axor	ENGINE MANAGEME	2536 bluetec5 (06-08)	MB
 Axor	ENGINE MANAGEME	2540 bluetec5 (06-08)	MB
 Axor	ENGINE MANAGEME	2543 bluetec5 (06-08)	MB
 Econic	MAINTENANCE SYST	1824 LL (05-07)	MB WS
 Econic	MAINTENANCE SYST	1829 LL (05-07)	MB WS

## Systems supported by ECUREADER (update from V5,1x to V5,21)

### TRUCKS













### Mercedes Trucks

MODEL	SYSTEM TYPE	ENGINE / SYSTEM	ECU
 Eonic	MAINTENANCE SYST	1833 LL (05-07)	MB WS
 Eonic	MAINTENANCE SYST	2629 LL (05-07)	MB WS
 Eonic	MAINTENANCE SYST	2633 LL (05-07)	MB WS

## Systems supported by ECUreader (update from V5,1x to V5,21)

### TRUCKS

Scania

MODEL	SYSTEM TYPE	ENGINE / SYSTEM	ECU
 R-series	DIESEL ADDITION	R230 (07-08)	EEC
 R-series	DIESEL ADDITION	R270 (07-08)	EEC
 R-series	DIESEL ADDITION	R310 (07-08)	EEC
 R-series	DIESEL ADDITION	R340 (07-08)	EEC
 R-series	DIESEL ADDITION	R380 (07-08)	EEC
 R-series	DIESEL ADDITION	R420 Euro 4 (07-08)	EEC
 R-series	DIESEL ADDITION	R420 Euro 5 (08-..)	EEC
 R-series	DIESEL ADDITION	R470 (07-08)	EEC
 R-series	DIESEL ADDITION	R500 (07-08)	EEC
 R-series	DIESEL ADDITION	R560 (07-08)	EEC
 R-series	DIESEL ADDITION	R580 (07-08)	EEC
 R-series	DIESEL ADDITION	R620 (07-08)	EEC